

DUCT-PRO POWER WHIP

from

ABATEMENT
TECHNOLOGIES



EFFICIENT AND EFFECTIVE

The DUCT-PRO POWER WHIP provides source removal duct cleaners with an effective and economical tool for dislodging caked-on debris from inner duct surfaces. This unique tool is designed to save time and money and to improve cleaning quality.

POWER DRILL-OPERATED

The DUCT-PRO POWER WHIP is powered by a standard 3/8" or 1/2" electric drill (not included). The drill is used to turn a specially designed cable in either the clockwise or counterclockwise direction. This cable in turn rotates the POWER WHIP assembly for power agitation of the contaminants.

Model K3-1010 comes with a 10 foot power cable. Model K3-1020 comes with a 20 foot cable.

SINGLE ACCESS CLEANING

The bi-directional design of the DUCT-PRO POWER WHIP enables the operator to clean both sides of a 10 or 20 foot section from a single access point. This is especially important when trying to clean the side walls and hard-to-reach corners of square or rectangular

ducting. Clockwise operation propels the POWER WHIP against the right side as it travels away from the operator. Reversing the direction facilitates cleaning of the left side as the whip is pulled back toward the operator.

"WHIP-IT" CLEAN

The DUCT-PRO POWER WHIP comes equipped with three diameters of 1 inch wide nylon whips - 10 inch, 14 inch, and 18 inch. The cleaning head attachment features a unique locking pin mechanism that eliminates the detachment problems that occur when threaded fittings are operated in the counter-clockwise direction.

This cleaning head attachment is also newly redesigned for fast setup and whip size changes.

OPTIONAL BRUSHES

Several specially designed bristle brushes are also available as optional accessories for the DUCT-PRO POWER WHIP. Also designed for bi-directional operation, these brushes can be purchased individually or as a package.

DUCT-PRO® POWER WHIP

Optional Brush Attachments



OPTIONAL BRUSHES

Abatement Technologies has developed a special line of brushes that can now be used with the DUCT-PRO POWER WHIP.

The two color-coded brush designs can tackle virtually any duct material encountered in the field.

The blue poly bristled brushes are ideal for duct board, lined duct, flex and small round metal ducts. The soft bristles loosen the debris without

damaging the ductwork material, which is extremely important when cleaning fiberboard materials.


The special "step" brushes are designed for metal duct. The shorter stiff black bristles keep the brush centered while providing aggressive cleaning.

The longer soft red bristles get into the corners and sweep the debris away from the surface.

BRUSH SET (also sold separately)

8", 12" & 18" diameter soft blue brushes.
7"/13"/7" & 11"/18"/11" diameter "Step" brushes.

"STEP" BRUSH SHOWN INSIDE RECTANGULAR DUCT

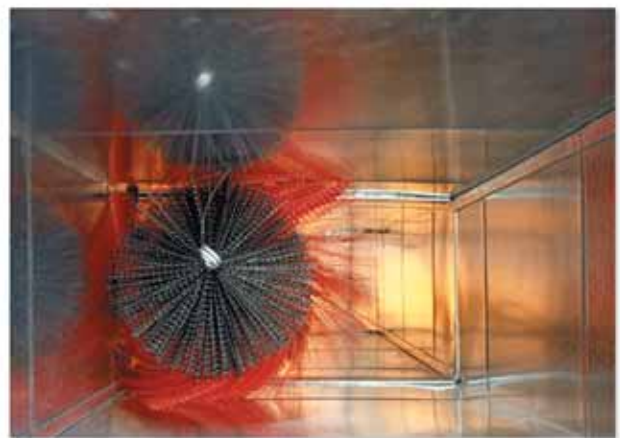

U.S.: 800-634-9091
Int'l: 678-889-4200
Canada: 800-827-6443

ABATEMENT TECHNOLOGIES
Technologically Advanced Air Purification Products

Fax: 678-889-4201
email: iaqinfo@abatement.com
www.abatement.com

Abatement Technologies, Inc., 605 Satellite Blvd. #300, Suwanee, GA 30024

C.2001, Abatement Technologies, Inc., Suwanee, GA 30024. All Rights Reserved. No reproduction of any portion of this work is permitted without the express written permission of Abatement Technologies, Inc. All illustrations and specifications contained in this brochure are based on the latest product information available at the time of printing. Abatement Technologies reserves the right to: (1) make changes at any time, without notice, to product designs, specifications, materials and colors, (2) introduce new products to the marketplace, and (3) discontinue products as it sees fit. #03-01-218 8/01 5000