

THE CAP100-U UPGRADEABLE CENTRAL AIR PURIFICATION SYSTEM

Close More Profitable Whole-House Air Filtration Equipment Sales

The CAP100-U Central Air Purifier is an economical, easy-to-install inline air filtration system for new construction and retrofit applications. Its unique upgradeable design really sets this system apart from competitive inline filtration products, enhancing your profit opportunity by enabling you to upgrade customers in two simple steps:

Step 1:

Install the standard CAP100-U model to significantly upgrade the particulate filtration-efficiency and dirt holding capacity of their HVAC system. The CAP100-U is equipped with two-stage filtration, including a 5"-deep MERV 11 final filter designed to capture most of the small particles in the HVAC return airstream that pass right through most 1" furnace filters.

Step 2:

Upgrade the customer again later by adding the easy-to-install UM100-UV upgrade module. The high-output germicidal UV (UVGI) lamp in the UM100-UV is designed to break down odors, and to capture bacteria, mold spores and other bio-pollutants. Simply slide the UVGI module into the CAP100-U cabinet, secure it in place, replace the standard 5"-deep CAP100-U filter with a MERV 13 special UV-resistant filter, and plug the power cord into a 115 VAC receptacle.

Ideal For New Construction & Retrofit Into Existing Homes

This two-step sales process is extremely well suited for installing units during new home construction. Most HVAC contractors serving this market include the basic CAP100-U model when pricing the HVAC system for the builder, and then up-sell the homeowner to the UM100-UV upgrade module later. The CAP100-U system and UM100-UV germicidal UV module install easily onto most existing residential forced air systems.

Specifications

Dimensions: 20"H x 25"D x 9"W;

Weight / Including Filters: 23 lbs.


Upgrade Module Components: UV Resistant 5" MERV 13 Final Filter; UV Lamp; Access Door with Cutouts for Switch; Power Cord; Indicator Lamp; Electrical Interlock Lamp-Shutoff Switch

Get all the information you need.

Call your Abatement Technologies' CAP Sales Consultant Today!



Basic Unit

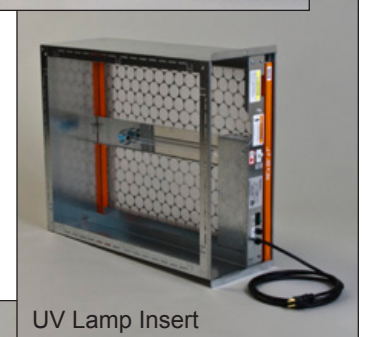

UV Lamp Insert



Complete UV Upgrade

 **ABATEMENT**
TECHNOLOGIES
World Class Indoor Air Quality Products


Intertek


United States: 800.634.9091

Canada: 800.827.6443

Overseas: 678-889-4200

www.abatement.com

Pressure Drop

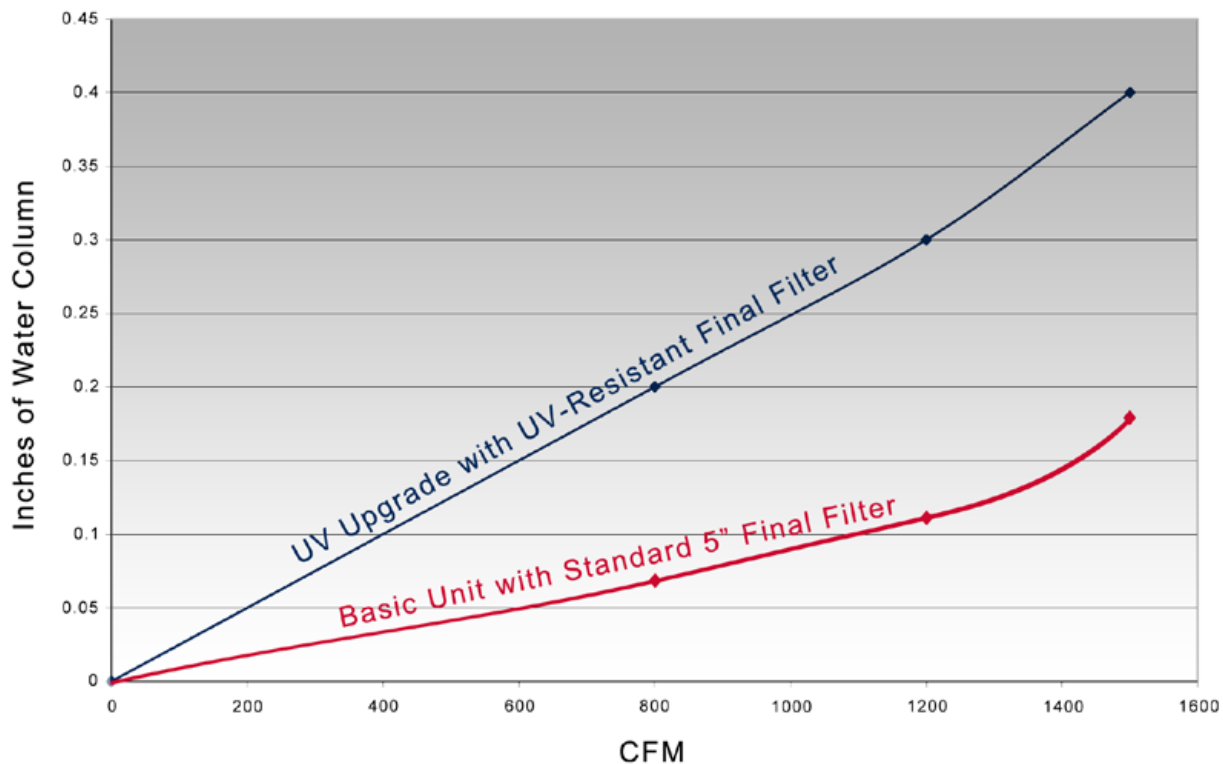

ASHRAE 52.2 Composite Minimum Particle Size Efficiency

