

NEW DRYER VENT CLEANING SYSTEM.

A flexible, efficient tool for residential and commercial jobs.

Dryer vent cleaning is a lucrative business opportunity. And a perfect add-on service for duct cleaners.

The new Dryer Vent Cleaning System (Part# K3-4000) from Abatement Technologies is designed for loosening debris prior to removal using compressed air. The system features two different types of flexible rods: 5 Medium Flex rods for straight runs and 5 High Flex rods for runs with more bends and turns. Rods and tools snap together quickly and easily via sturdy precision aluminum "QwikSnap" couplings. Rods are driven by a standard electric hand drill (not included), using the chuck tool included in the kit. A 'blockage removal' tool is also included to dislodge bird nests & other sources of blockage.

Optional tools include: an adaptor to allow using these rods with duct cleaning brushes and a nylon whiphead for larger metal dryer ducts.

Call us today to get started.


COMPLETE DRYER VENT CLEANING SYSTEM

1. Carrying Case & Cleaning Rods
5 40" Medium Flex Rods
5 40" High Flex Rods
2. Set of Brushes: 4", 6" & 8"
3. Blockage Removal Tool
Drill Driver for Flex Rods
4. Lint Brush
24" High Flex Lead Rod
12" Spring Lead
5. Sturdy, Precision "QwikSnap"
Aluminum Couplings



OPTIONAL ACCESSORIES

6. Adaptor for Duct Brushes
7. Nylon String Whiphead

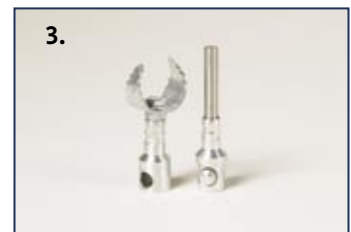

ABATEMENT TECHNOLOGIES
Technologically Advanced Air Purification Products

United States: 800.634.9091
Canada: 800.827.6443
www.abatement.com

605 Satellite Blvd., Suite 300, Suwanee, GA 30024
PHONE 678.889.4200 FAX 678.889.4201